


Bettkasten16




Montage




Müller

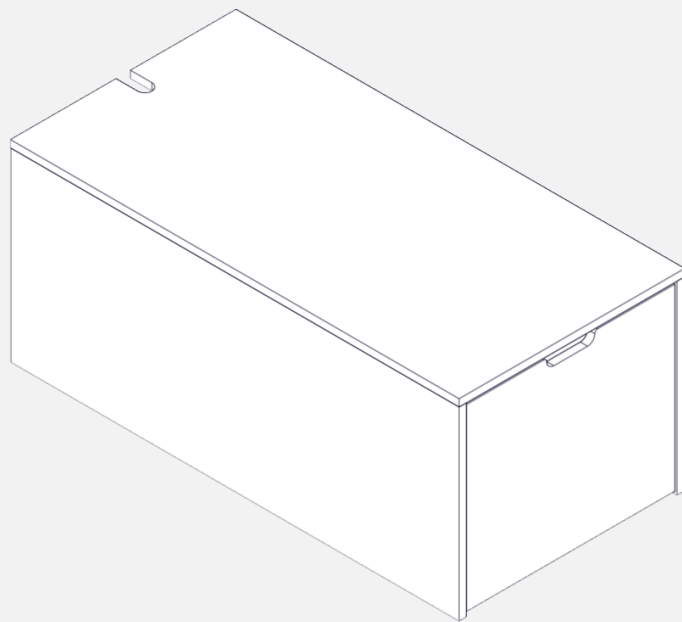

Bettkasten16

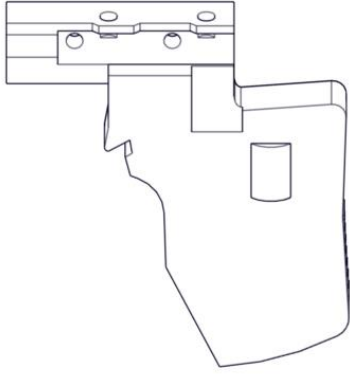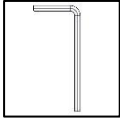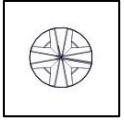

BSF-0051L

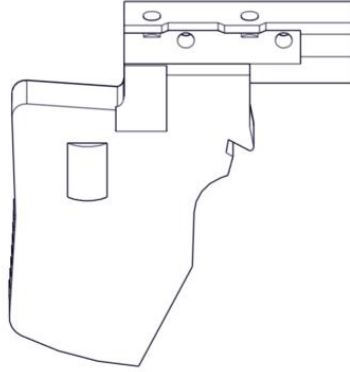

BSF-0051R



BSCH-0054
x4



BDU-0007
x38






BDU-0001
x32



BSCH-0139
x3




BEX-0001
x32

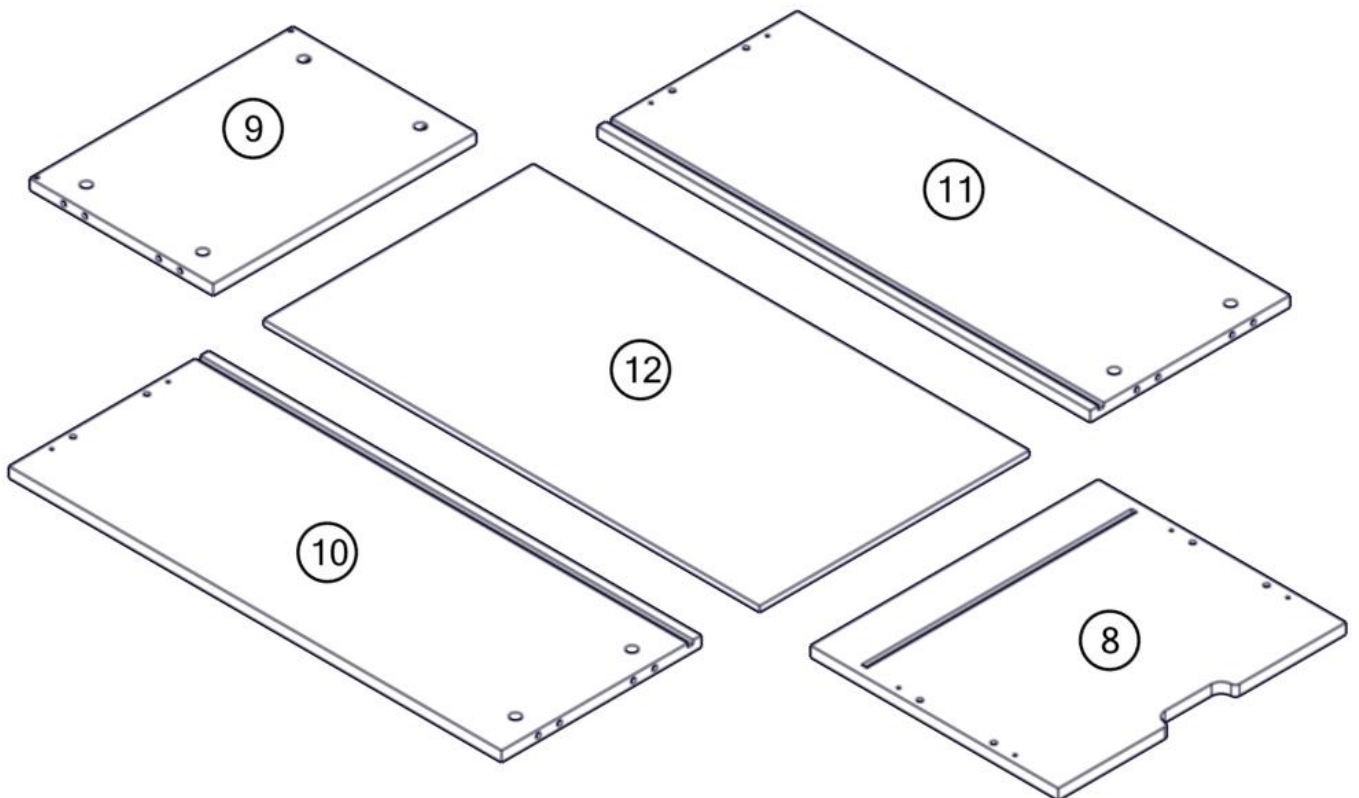
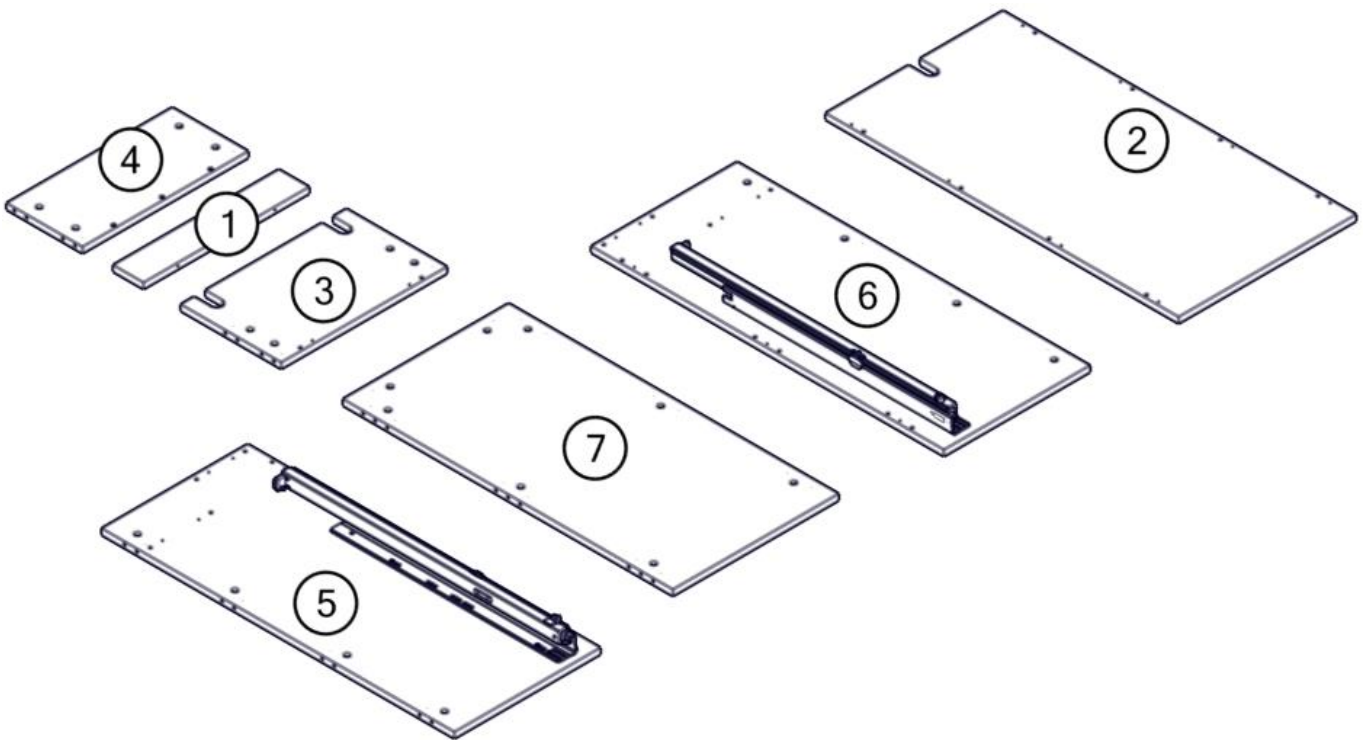





Bettkasten16

1

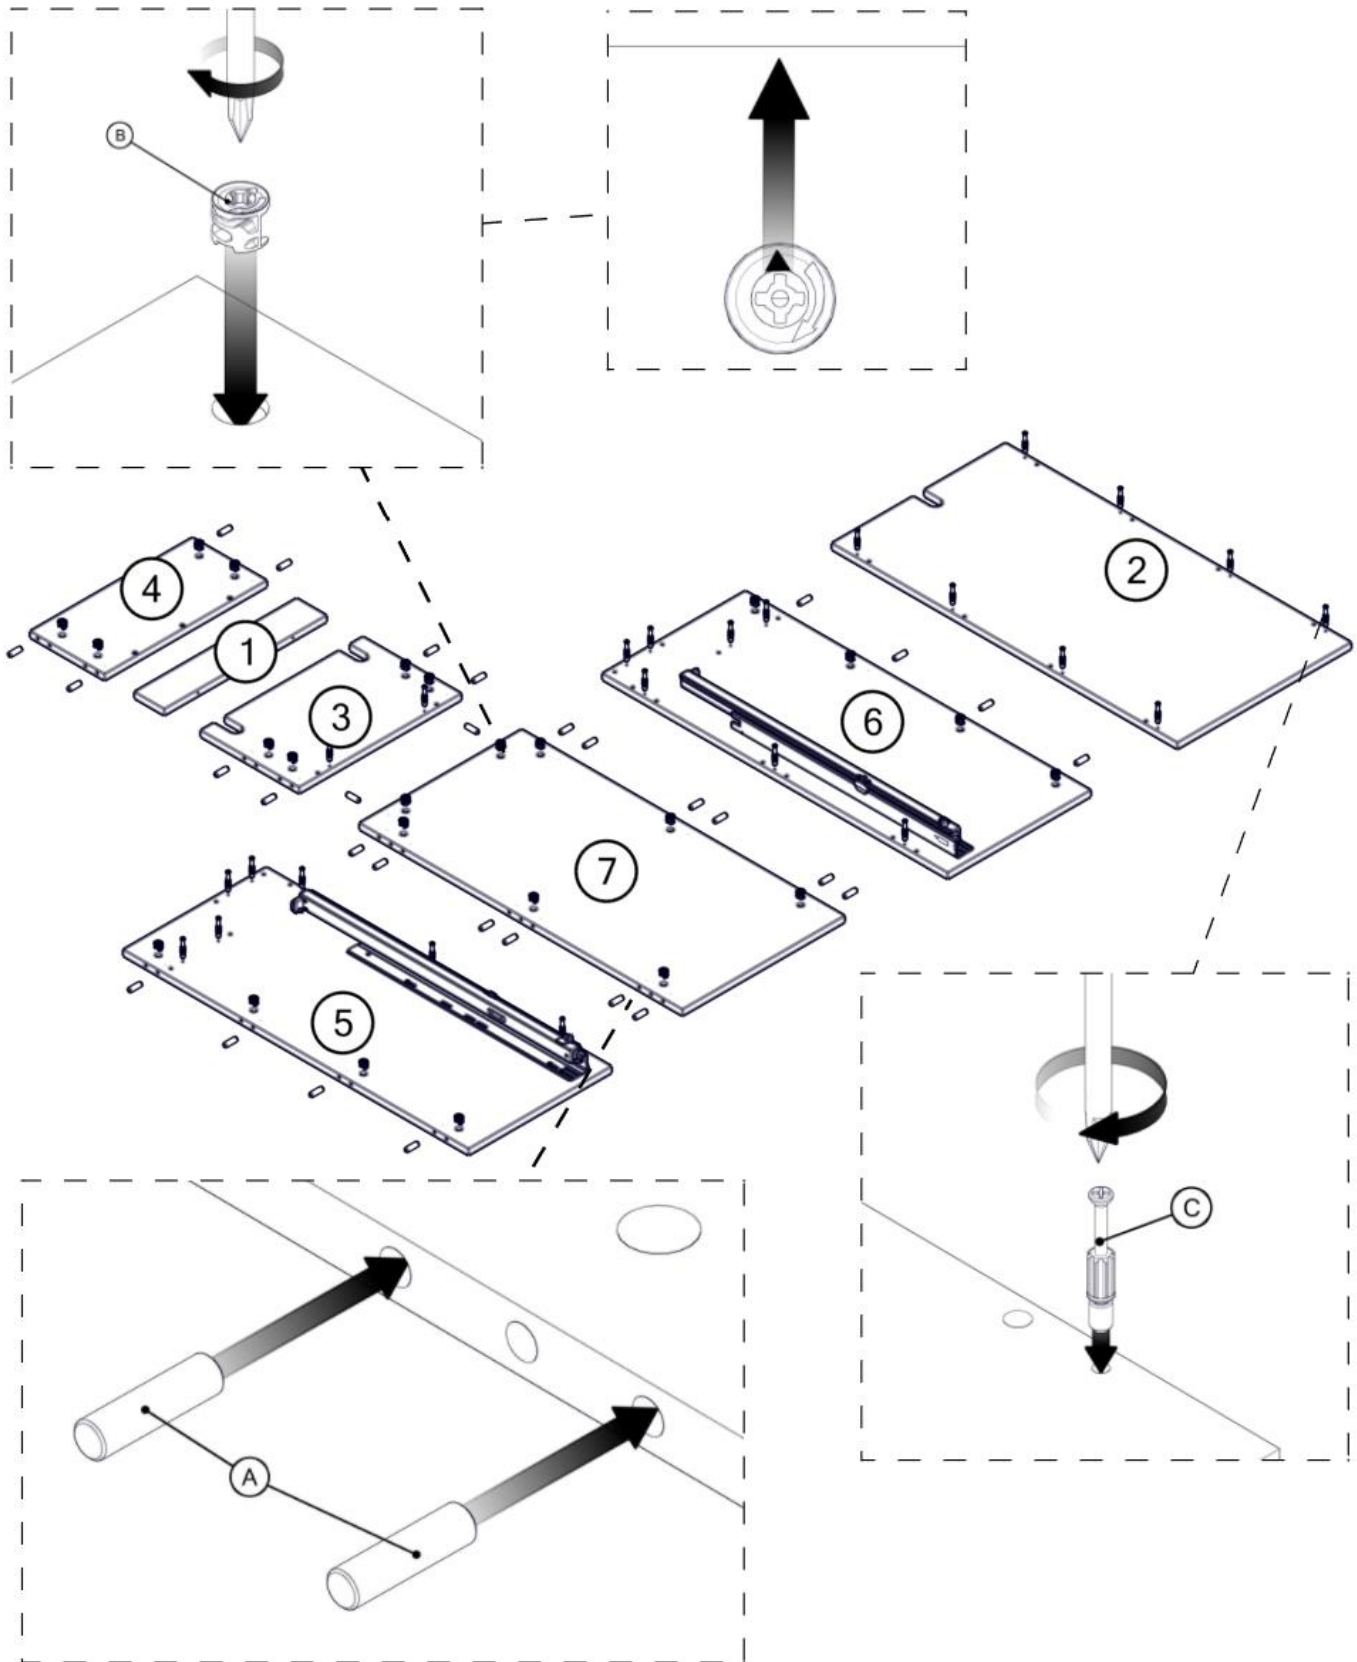


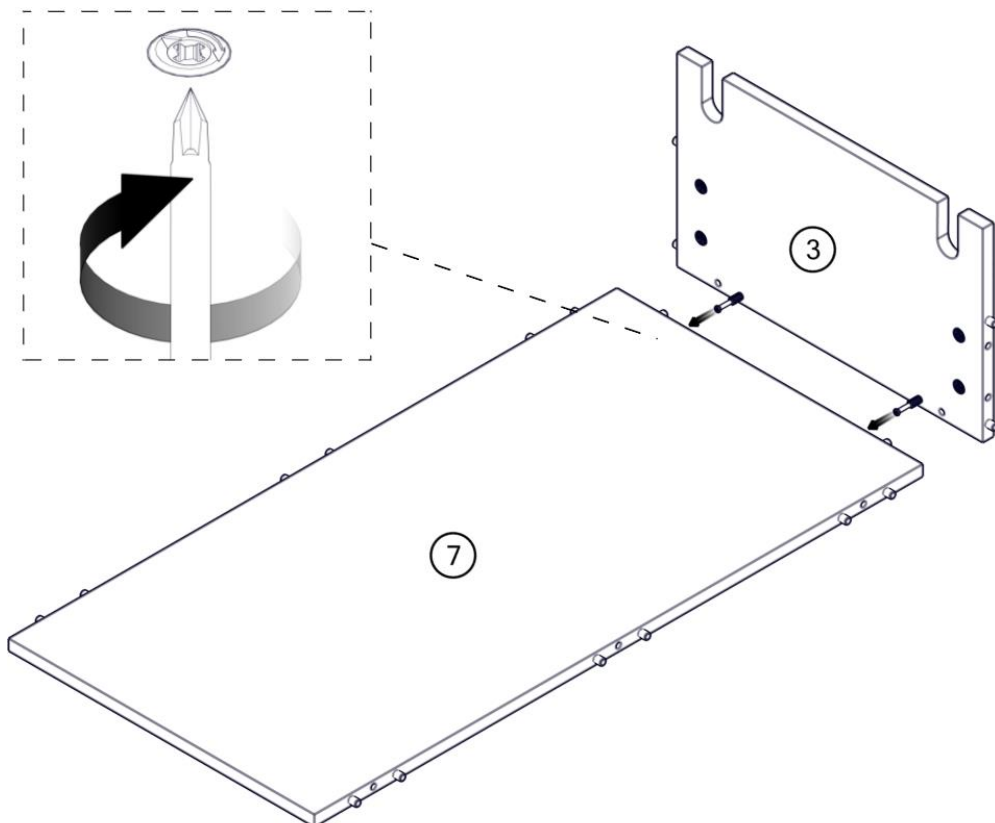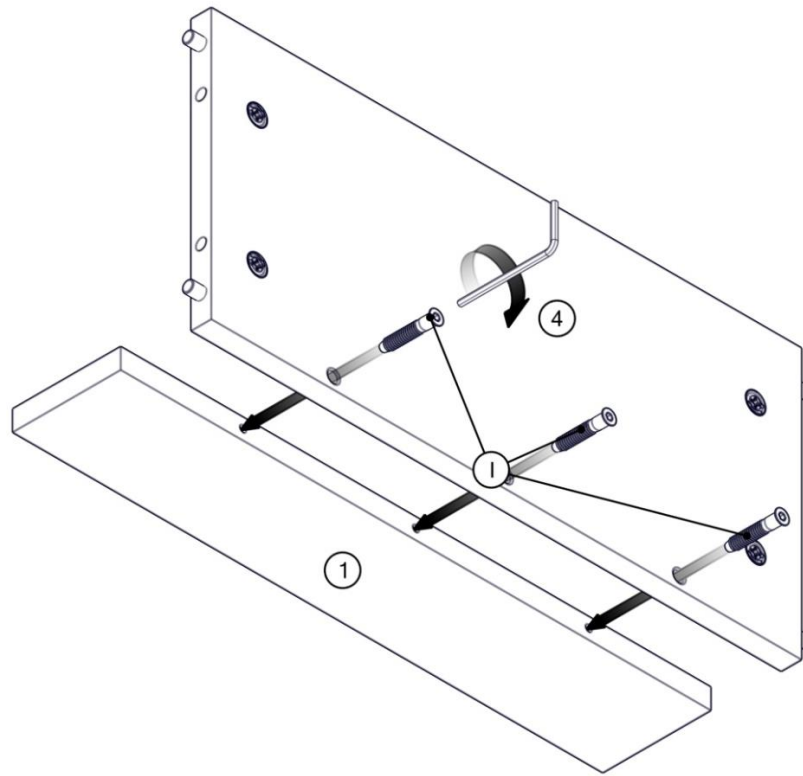





Bettkasten16

4

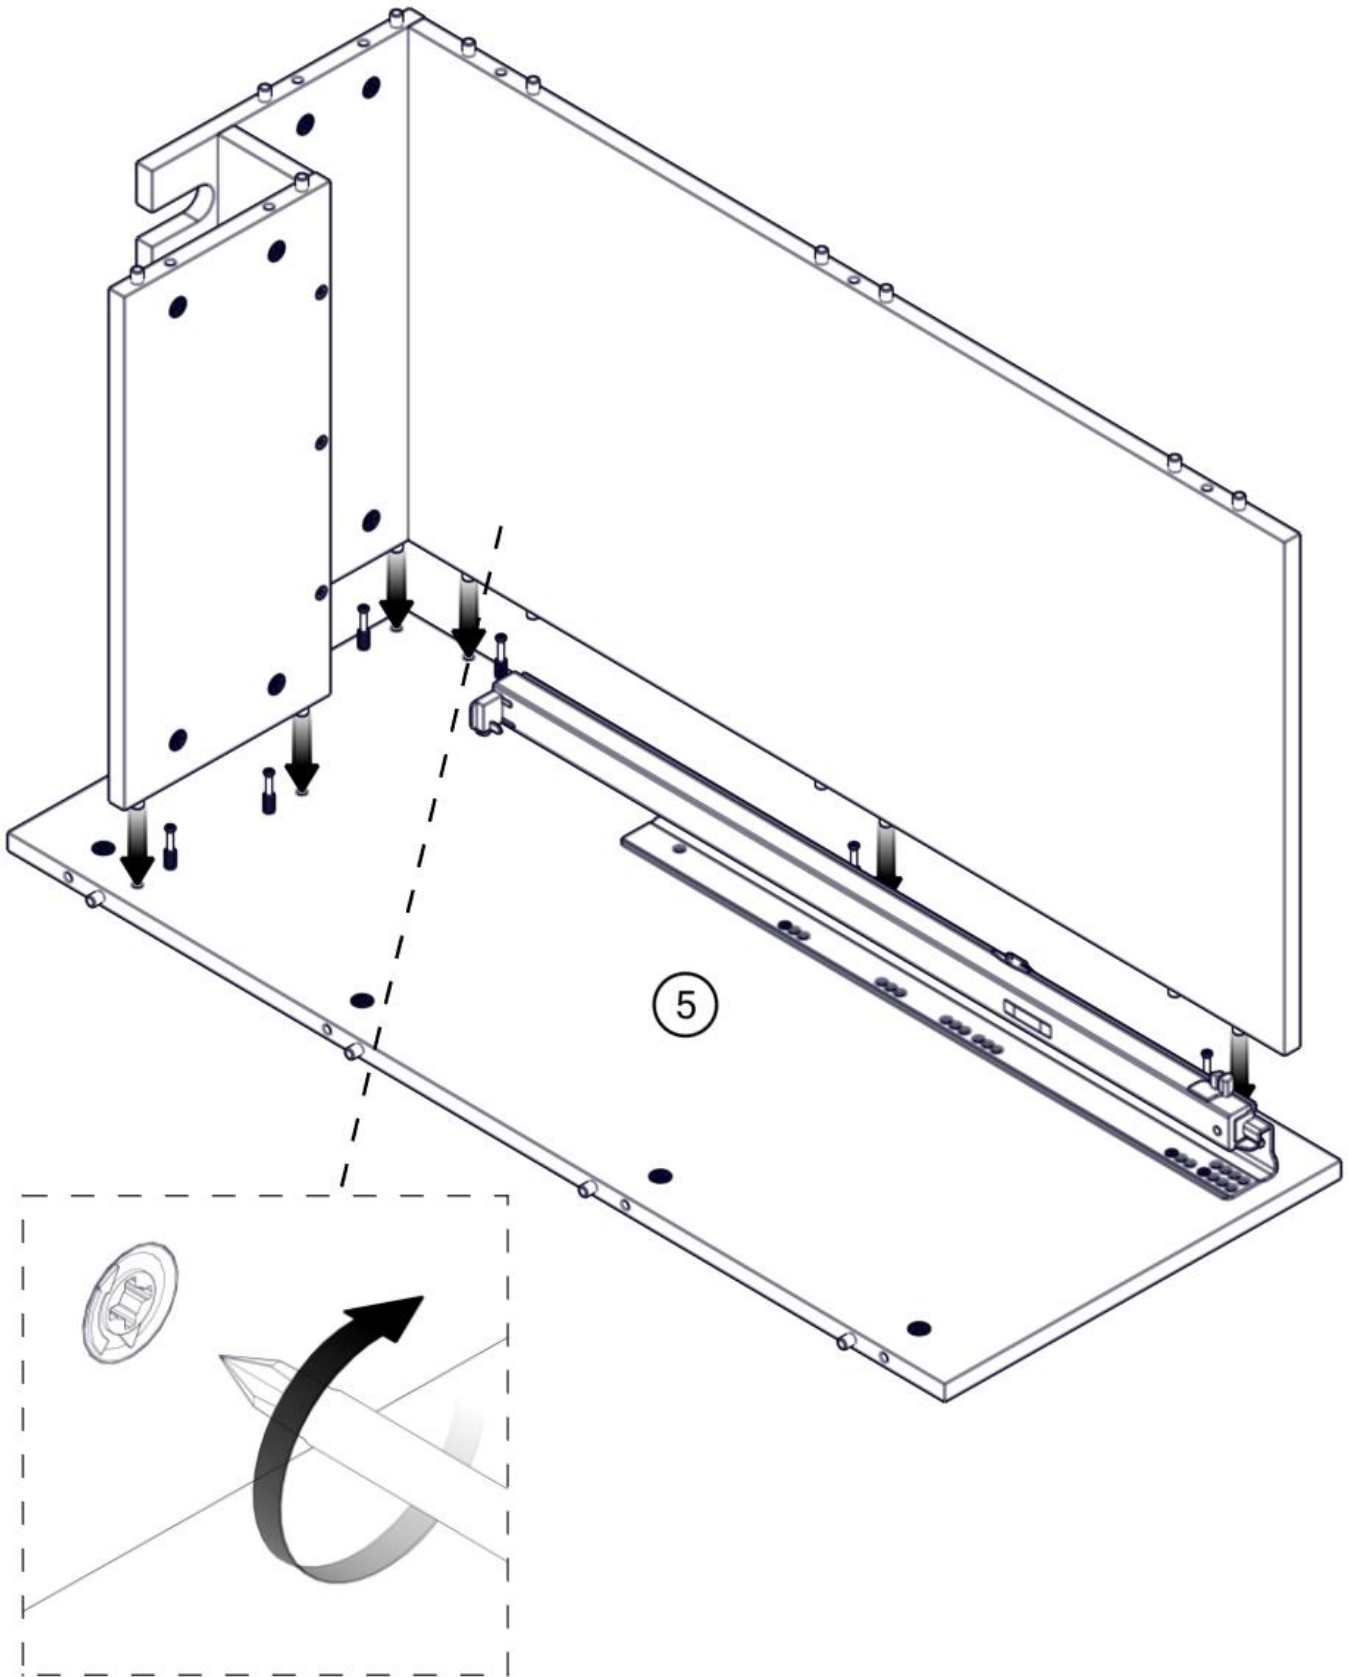


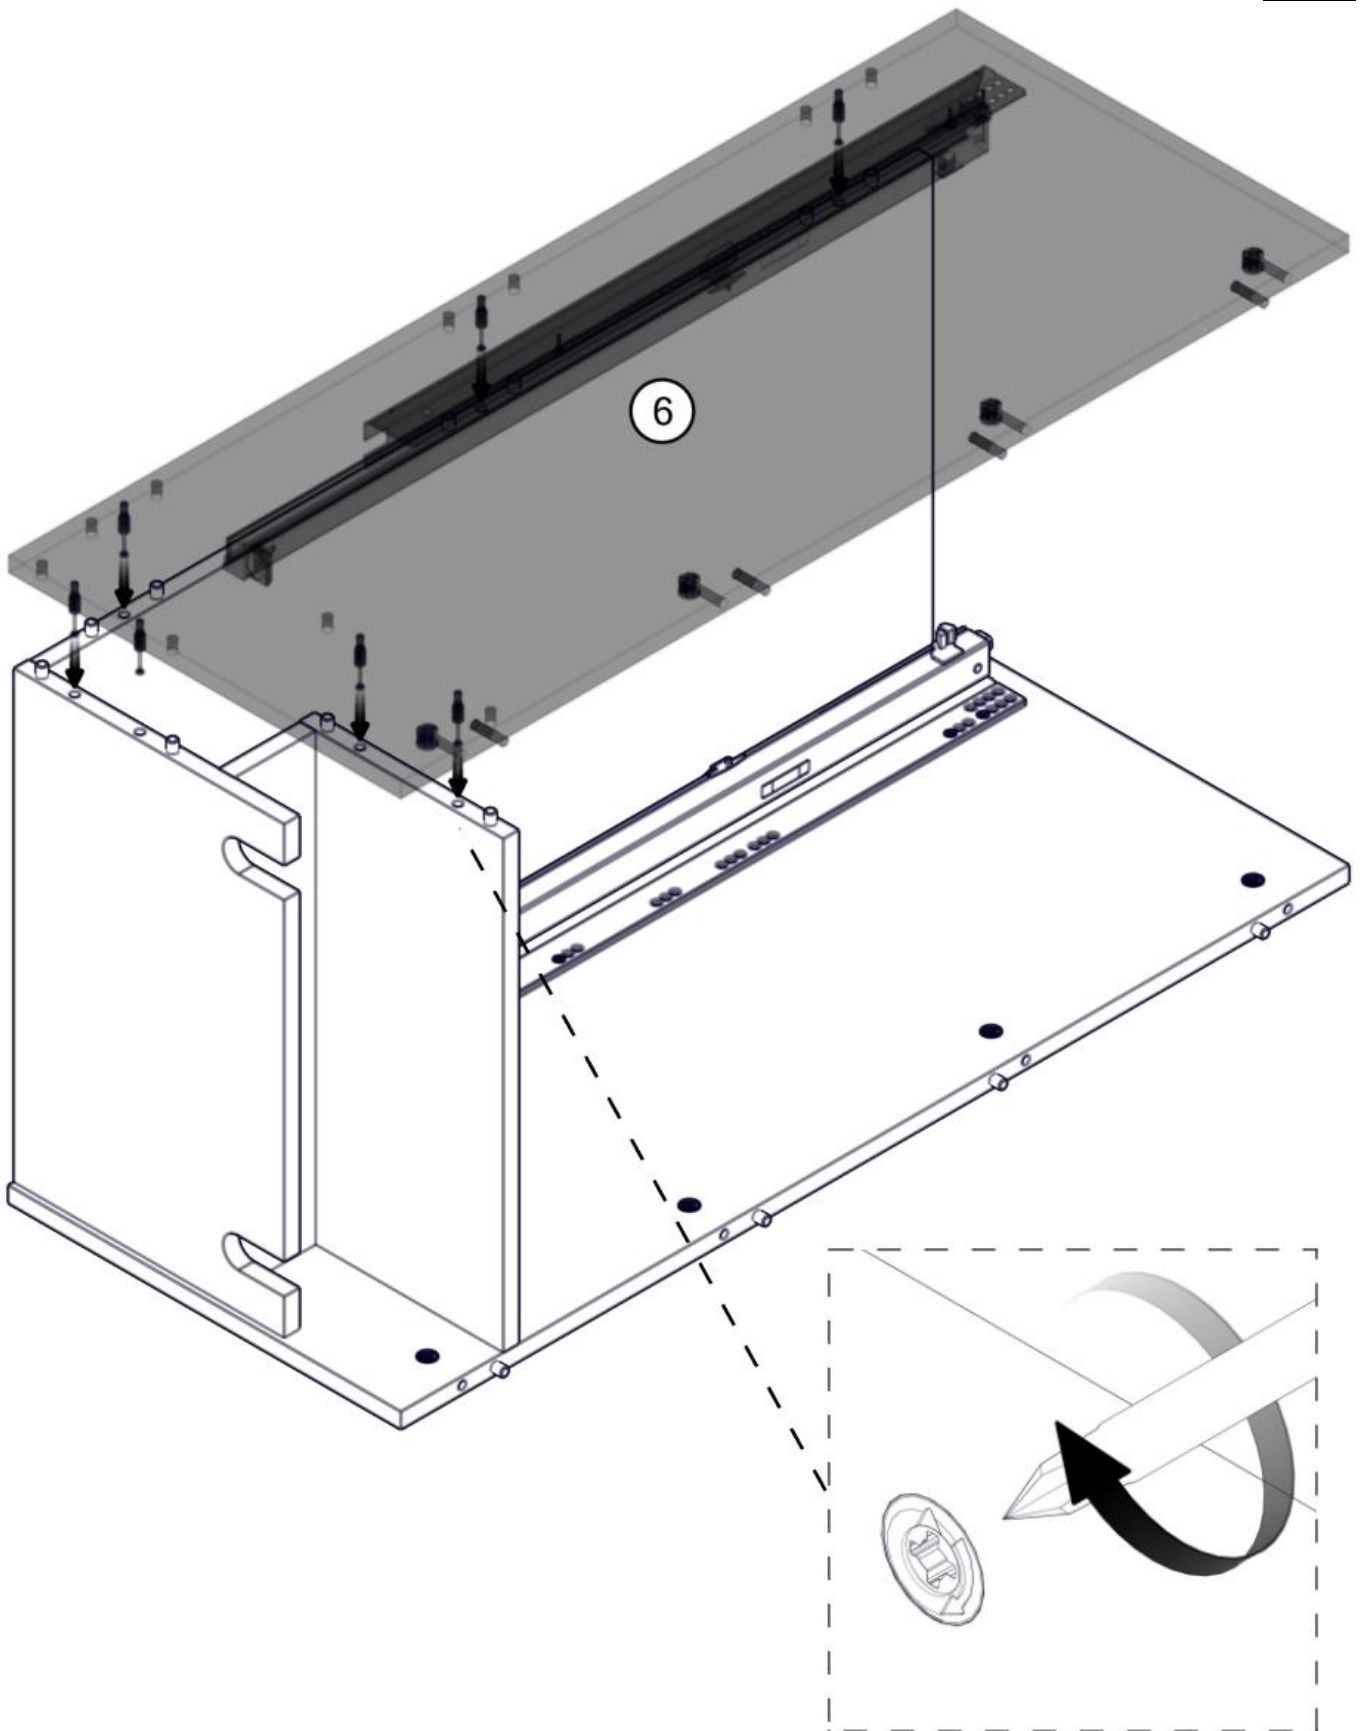





Bettkasten16

6

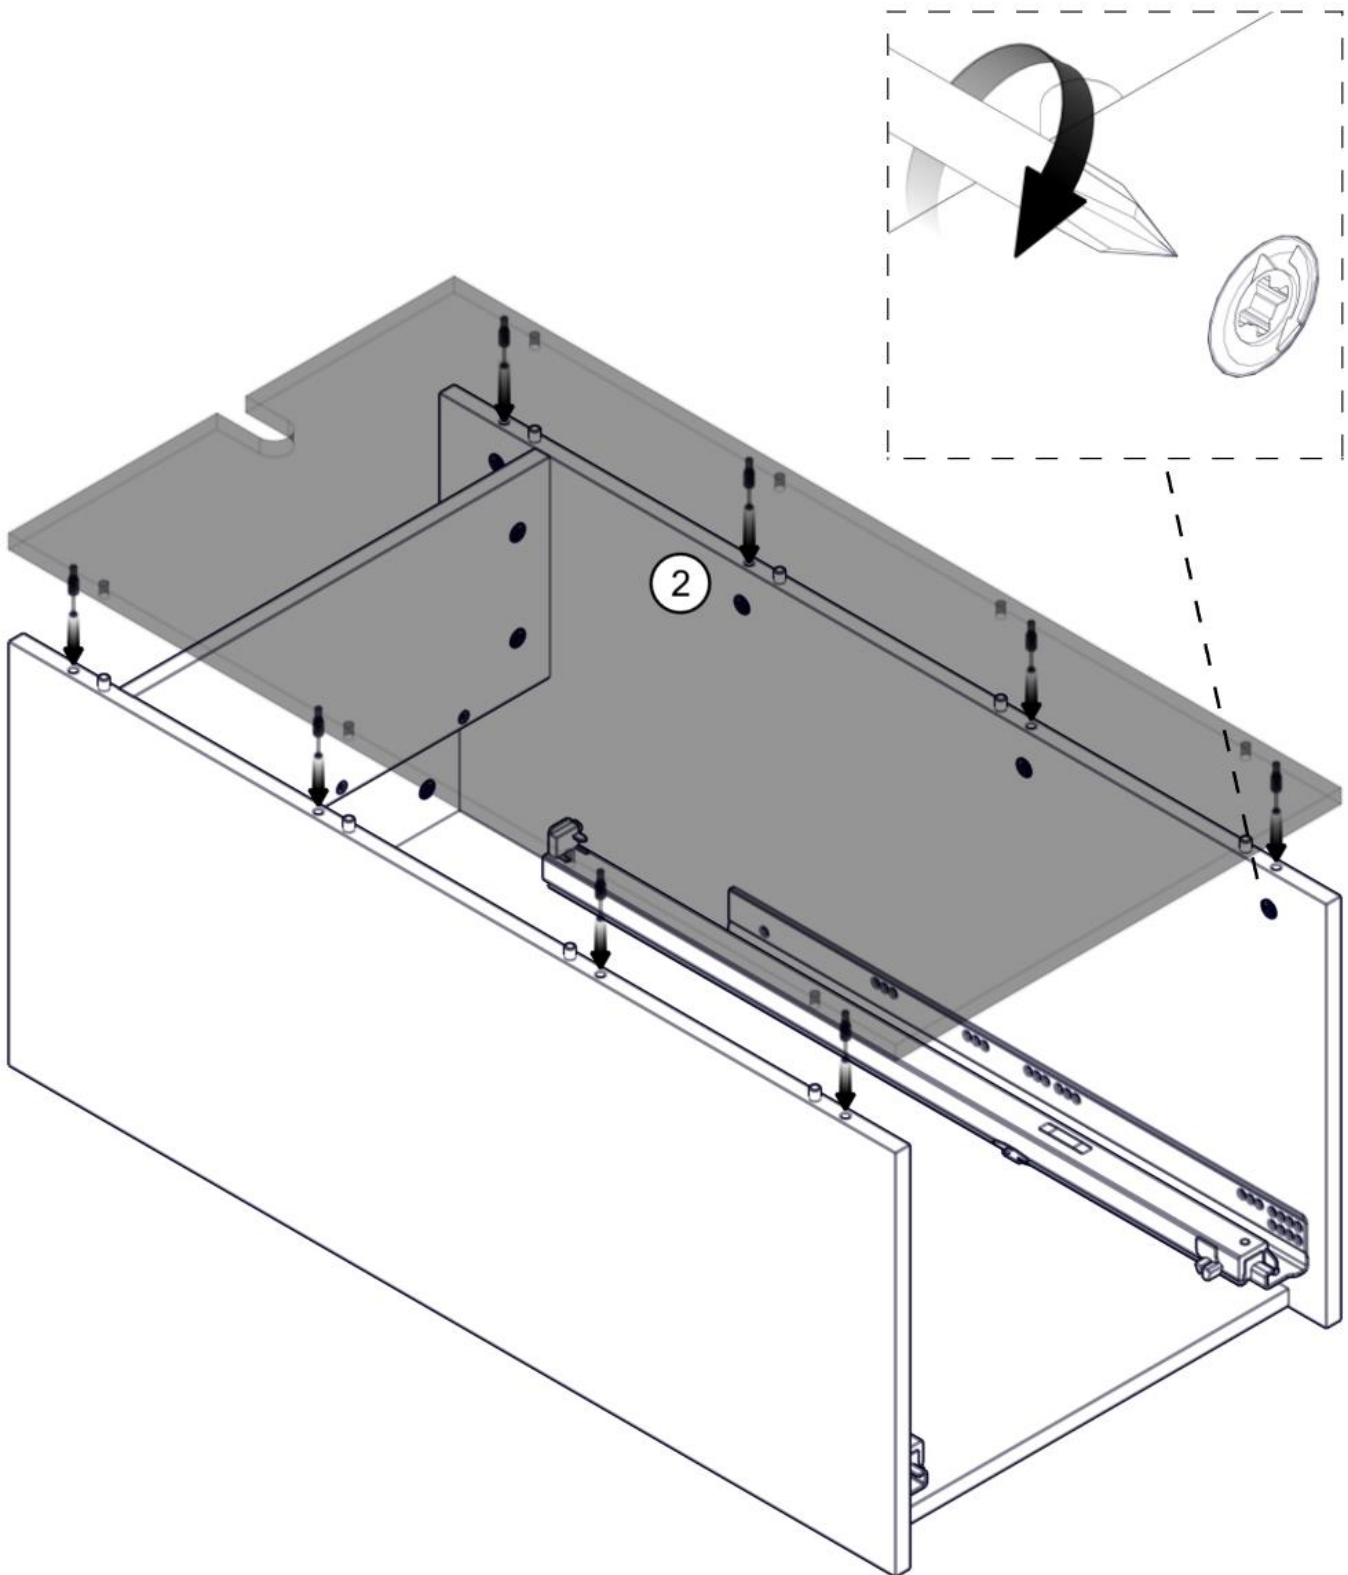


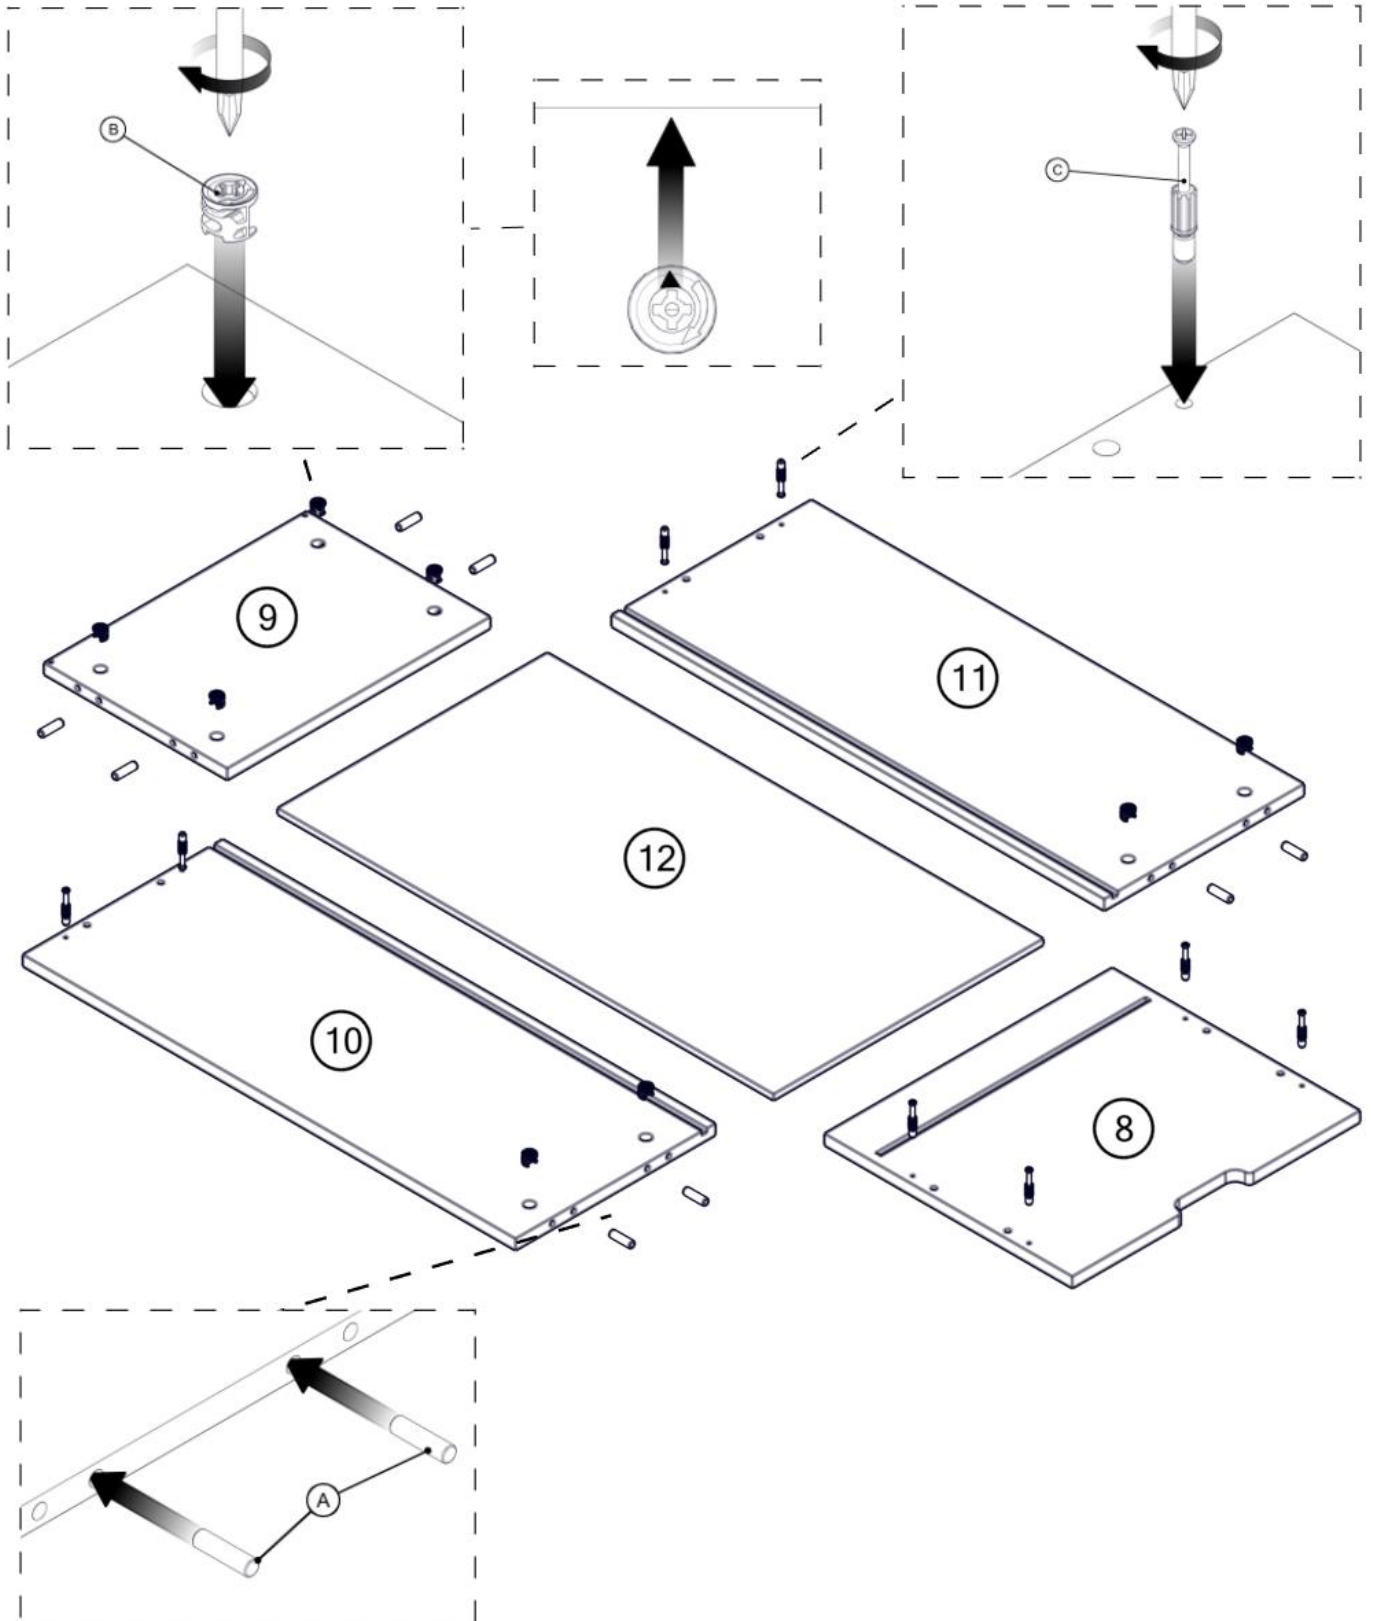





Bettkasten16

8

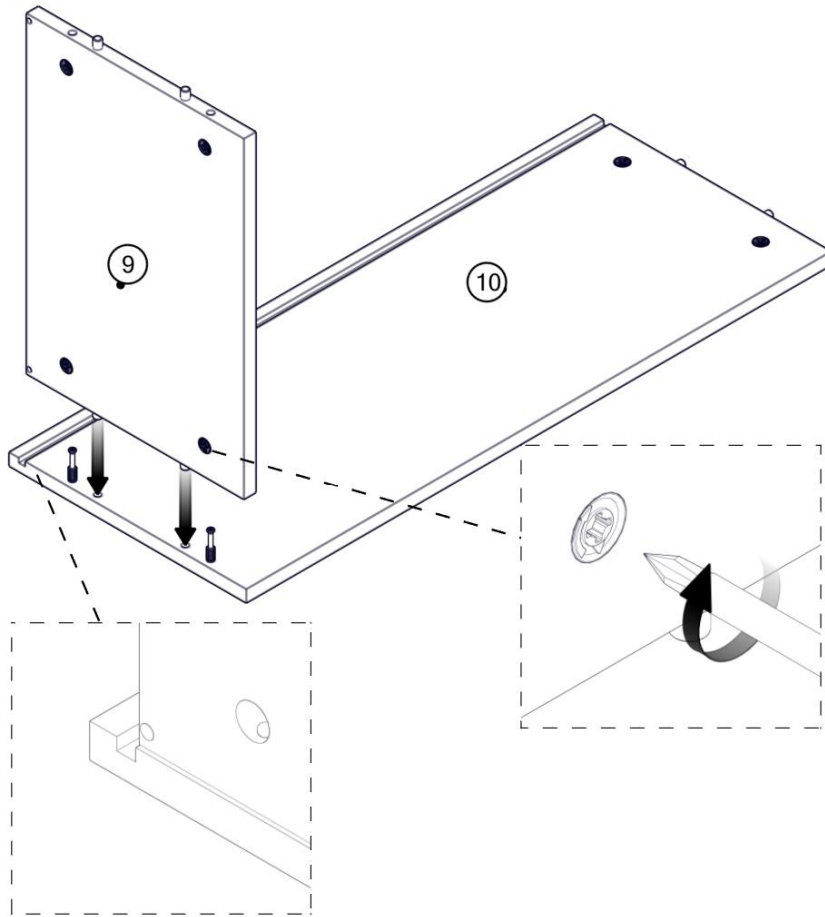


9

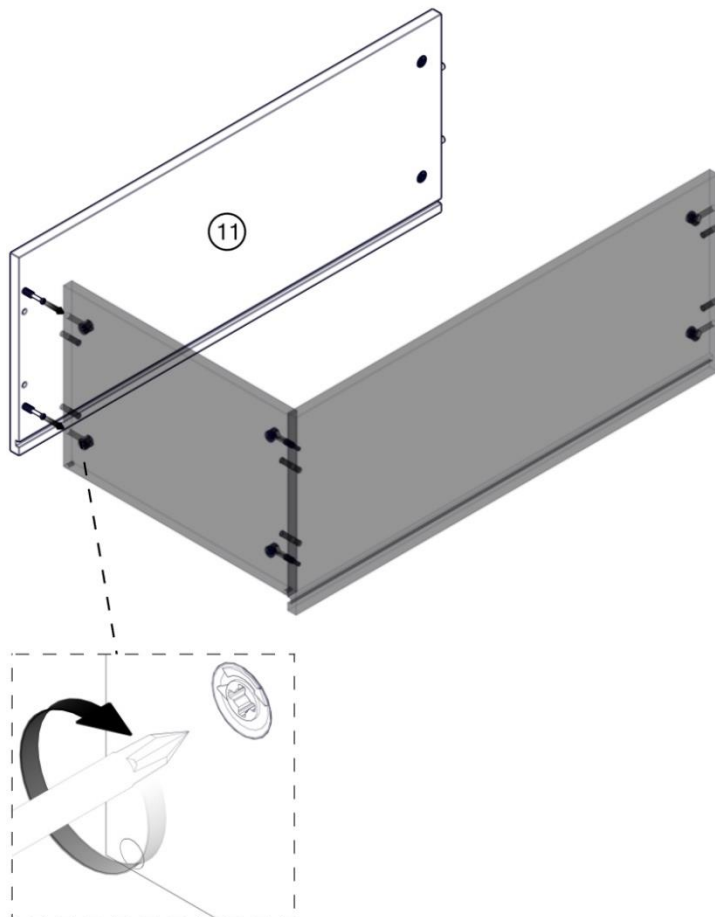




10

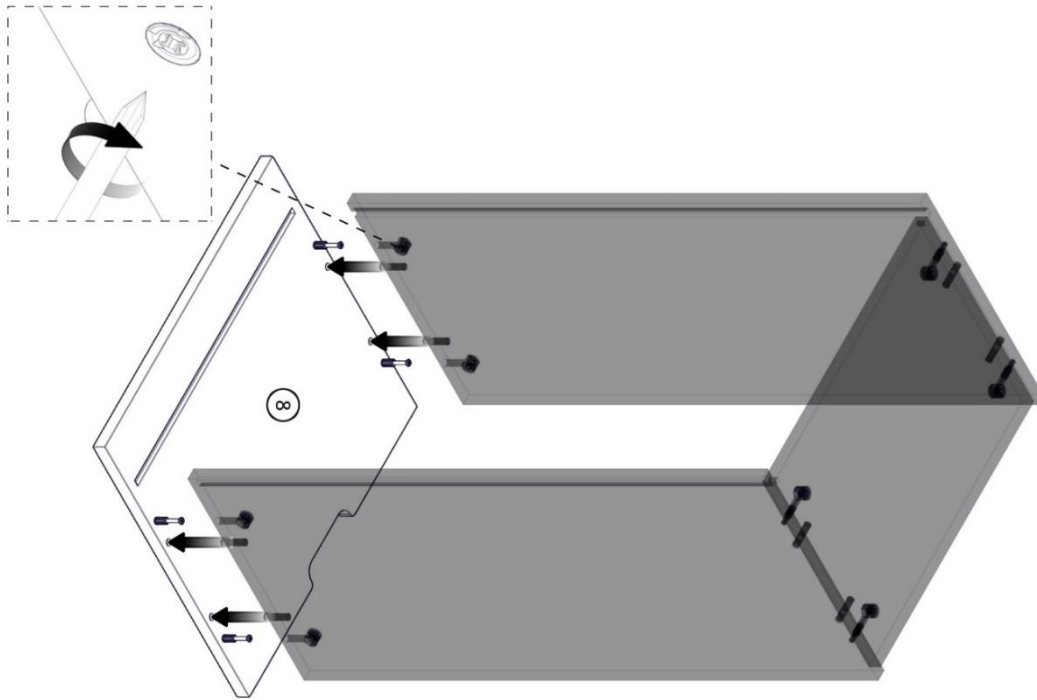


11

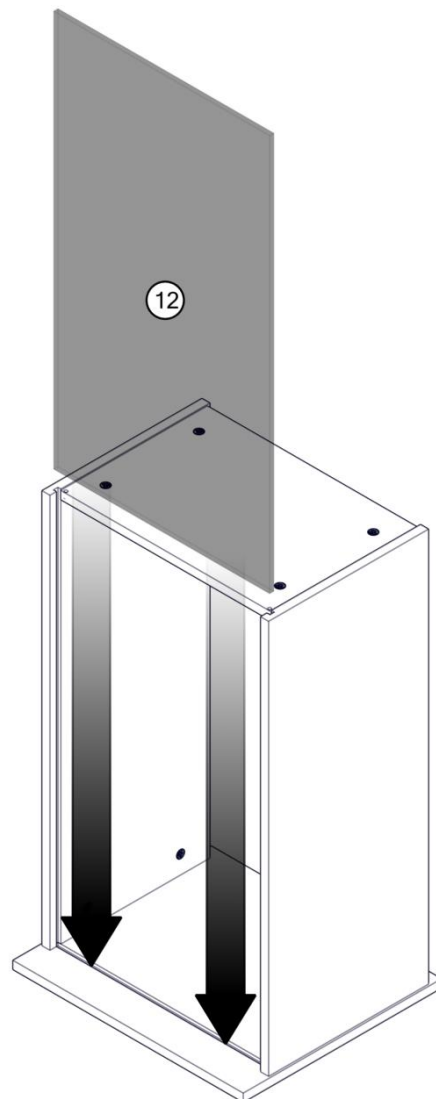



Bettkasten16

12

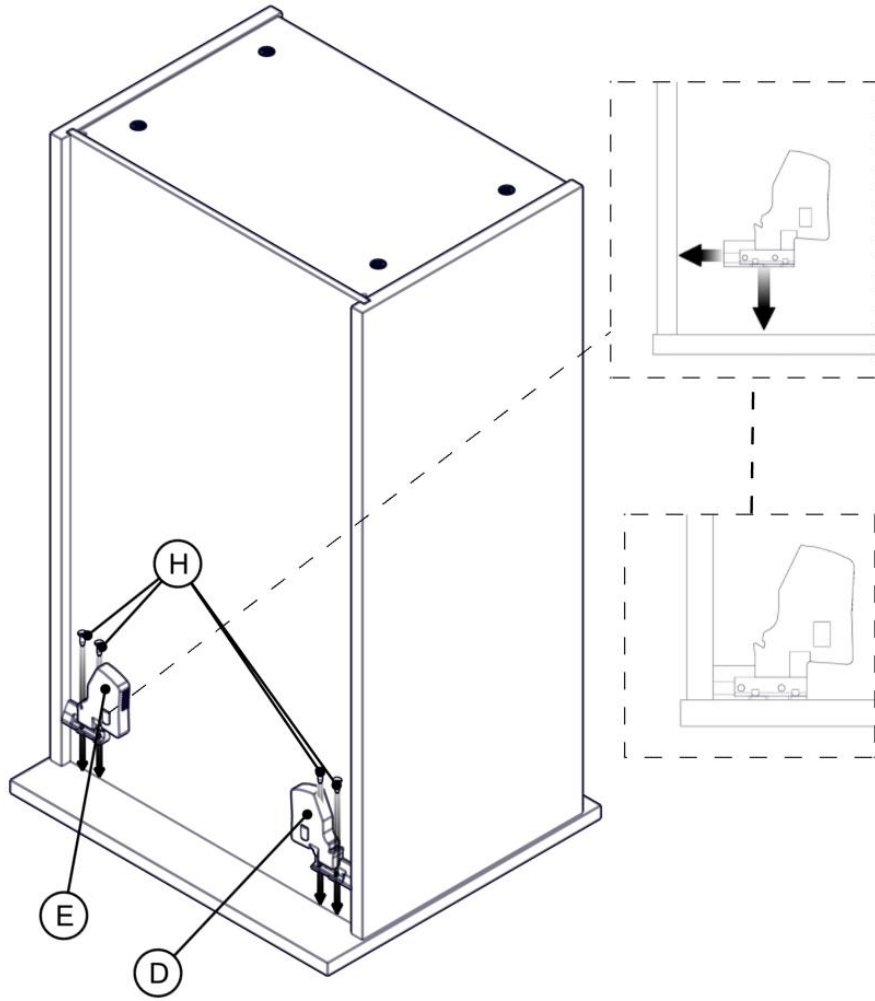

13

